

YUTONG USER MANUAL (LJ17LLJ)

Keys- the larger grey button on the fob shuts front door and bottom grey button opens the door. The red buttons are for the middle door, top red button shuts the front door bottom one opens it.

Getting in- using the key to unlock the door then pushing the smallest grey button to open the door.

Power- the power switch is located on the dash to the right of the steering wheel (see chart).

Main kill switch- is located on the dash to the right of the steering wheel number (see chart)

Heat/Aircon- Steams up badly and you will need to open the drivers window slightly in order to reduce this. There are 3 dials to control the temperature the two upper ones are for passengers temp control the lowest one is for cab, the panel labeled **1** is to control fan direction and speed and aircon.

Microphones- Three fitted one is in the dash the other is attached to the wall to the right of driver seat/window, both are simply slide switch and they are on. And the third is also in the dash but is wireless, simply lift up and switch on, can pick up chatter from other mics when travelling.

Boiler- boiler is located halfway down the coach near the middle steps No switch on the dash its always on and simply push the button and wait a few seconds and hot water should flow. Topping up the boiler, is located in the front offside locker.

Boiler winter prep- needs emptying in order to prevent damage during the harsh cold weather, simple enough, offside front locker unplug the hose and then go back inside to pull all the water through.

Toilet- Toilet drop lever is located in the offside middle locker to the right of the middle door as you open the locker you will see a silver lever pull it down and to the left toilet will drop wait a couple of minutes the close it.

Batteries- Are in the rear offside ski locker.

Fuses- Are in the rear offside ski locker.

Oil/water/coolant- Rear offside locker

Spare Belts- In the engine bay to the left as you open door cable tied to a pole.

Triangle- Inside front offside overhead locker.

Spare Bulbs-



1. Heating control
2. Driver heat control
3. Pax heat control
4. Pax heat control
5. Nearside sun blind
6. Offside sun blind
7. Release TV screens
8. Release TV screens
9. Warning lights Panel
10. Exhaust regen (do not touch)
11. Roof fans
12. Roof fans
13. Webasto



14.Driver heating system screen

16.Select different modes

18. Air recycle

20. CCTV screens

22. Tacho

24. Locker lights

26. Front fogs

28. Blue floor lights

30. Interior dim light

32. Interior main light

15. Driver heating system

17. Fan direction

19. Fan speed

21. Radio

23. Hazard lights

25. Front door

27. Rear fog lights

29. Night lights

31. Reading lights

33. Middle door



34. Interior temperature

35. Bluetooth

36. Mirror adjustment

37. Tracker

38. Kneeling coach

39. Ferry lift/kneel reset

40. Ferry lift

41. Exhaust break

42. Toilet

43. Stairs heating

44. Drivers floor heating

45. Air Horn

46. WIFI

47. Advance emergency break

48. Lane departure warning

49. Mirror heaters

50. Driving lights

51. Power kill switch

52. Power switch



53. Front nearside locker door

54. Rear nearside locker door

55. Fridge

56. Front offside locker door.

57. outlet plugs

58. Gear select

59. handbrake

