

SCANIA INTERLINK USER MANUAL (LJ15520)

Keys – Two buttons on the fob biggest button locks the coach smallest button unlocks the coach.

Getting in – the coach has central locking for doors only (lockers will need locking manually). To open the door there is two buttons on the door the lowest one will open the door the highest one will shut the door. Once open bear in mind the middle door will also open.

Power – Power switch is located to the right of the steering wheel lightning symbol.

Heat / Climate control – there are four dials to the left of the steering wheel to control the temperature. Any adjustments that are made can be seen on the small screen above the dials. For a quick breakdown summary push, the Back arrow button to give detailed info.

1st Dial is cabin (Driver) temp control twist left for cold right for heat

2nd Dial is for fan direction.

3rd Dial is fan speed twist left for less speed right for more.

4th Dial is passenger temp control, same function as 1st dial.

Microphones – two fitted one is in the dash lift switch on and it should just come on driver mic is on a separate switch to the right of the driver seat. (See chart)

Boiler – to top up boiler open rear nearside locker door here you will find a wheeled water storage container please remove hose connection before taking off the coach to top up and be sure to reconnect once fitted back in the coach. Back onboard the coach ensure switch is on (see chart) go to the middle and push the silver button located near the tap hot water will slowly start to feed through may take some time to heat up. **Issues** sometimes the pipes can get air locks go back to the locker disconnect hose and blow into them to try and eliminate any air locks.

Boiler Winter Prep – to prevent damage in winter due to cold weather please drain the boiler. Unclip the hose connector in the locker then go back inside to drain the water until empty.

Toilet – (Square key needed) locker near the middle door, once opened three black switches with symbols on one with picture of toilet and water droplet is the toilet drop button once pushed it will open for two minutes it will then need pushing again once empty to shut ensure its shut as toilet inside won't flush if not shut. Topping up the toilet requires hose connectors. Attach hose to pipe required (watering can, and hands is tap /sink top up) (watering can and WC is flush water top up) to allow water to flow small black lever needs to be turned to allow flow. Detailed instructions can be found on the locker door when you open it.

Batteries – they are in the front offside locker, held on by a large bolt unscrew thread then batteries will slide out for ease of use.

Fuses – most of the fuses are in the front nearside locker once opened they are inside on the left behind a panel. Some others are in with the batteries.

Spare Bulbs- front nearside locker on left as you open locker

Oil/ water/coolant – oil water and coolant are in the main locker as well as winter kit.

Spare belts –

Triangle-



- 1.Menu monitor
- 2.Tacho
- 3.radio
- 4.DVD player
- 5.Driver temp control
- 6.Air flow direction
- 7.Fan speed
8. Pax temp control



- 9.** Tracker
- 10.** Door reset
- 11.** Assist reset
- 12.** Front door
- 13.** Middle door
- 14.** interior lights rear (down for bright up for dim)
- 15.** interior lights front (down for bright up for dim)
- 16.** Reading lights (up for all on and down for if pax want them on)
- 17.** Front door light.
- 18.** Overhead Driver Light
- 19.** Hill assist
- 20.** Reverse beep off.
- 21.** Night light
- 22.** Ferry lift (up/down)
- 23.** Kneel/ferry lift reset (up)



24. Front fogs

25. Rear fogs

26. High Beam

27. Fuel heating switch

28. White smoke limiter switch (press the side with mark of the rocker switch to start the white smoke limiter)

29. Lights

30. Hazards

31. Traction control

32. Power switch

33. Mirror toggle



34. Cruise control

35. manual regeneration of particulate filter

36. Light check sequence

37. Mirror demist

38. Handbrake

39. Sun blind

40. Boiler

41. Fridge

42. Toilet

43. Stop light off switch



44. Steering wheel adjustment (on the steering wheel column)

45. Cruise control

46. Hill assist breaking

