

YUTONG USER MANUAL (YJ14JE0)

Keys- the larger grey button on the fob shuts front door and bottom grey button opens the door. The red buttons are for the middle door, top red button shuts the front door bottom one opens it.

Getting in- using the key to unlock the door then pushing the smallest grey button to open the door.

Reverse- putting most Yutongs in reverse requires you to push the green R button (see chart 30) as well as the R on the gear selector. Select reverse then push 30.

Suspension- so the suspension on the Yutongs are really soft and the coach can rock from side to side and feel like you are on the ferry but its safe and normal just ease off the accelerator and gently build up speed again.

Power- the power switch is located on the dash to the right of the steering wheel (see chart **38**).

Main kill switch- is located on the dash to the right of the steering wheel number **37** (see chart)

Heat/Aircon- the heater/aircon panel is located to the left of the steering wheel (see chart **19**). On the control unit the bottom left four buttons control all settings for the driver, and the reminding buttons to the right control the passengers temp controls. See chart for each individual description. The front window does tend to steam up on the Yutongs opening the driver window slightly will help with this. To operate the temp gauge use 54 (see chart) then 50 (see chart) to adjust and for fan speed push 53(see chart) then 50

(see chart) again to adjust.

Microphones- Two fitted one is in the dash the other is attached to the wall to the right of driver seat/window, both are simply slide switch and they are on.

Boiler- boiler is located halfway down the coach near the middle steps No switch on the dash its always on and simply push the button and wait a few seconds and hot water should flow. Topping up the boiler, is in the middle offside locker located near the middle door.

Boiler winter prep- needs emptying in order to prevent damage during the harsh cold weather, simple enough offside middle locker unplug the hose and then go back inside to pull all the water through.

Toilet- Toilet drop lever is located in the offside middle locker to the right of the middle door as you open the locker you will see a silver lever pull it down and to the left toilet will drop wait a couple of minutes the close it.

Suspension- this coach has very soft suspension and will rock from side to side whilst driving, easing off the accelerator and slowly speeding back up will reduce the effect.

Gears- putting this coach into reverse requires you to select button **30** (see chart) then you can select reverse.

Batteries- Rear offside locker

Spare Belts- some small ones in engine bay cable tied to bar on left bigger ones are in rear nearside locker

Fuses- are in the front offside locker in a drop-down cupboard.

Oil/water/coolant- located in the AdBlue locker.

Spare Bulbs-

Triangle-



1. DVD Player
2. Volume control
3. Radio



4. Various warning lights

5. Power outlets

6. Nearside sun blind

7. Offside sun blind

8. TV monitors/Drop down

9. Rear fog light

10. Front fog light

11. Floor lights(blue)

12. Main lights

13. Book lights

14. Main lights brighter

15. Headlights

16. Middle door

17. Front door

18. Tacho

19. Heating/Aircon

20. CCTV monitor

21. Tracking

22. Hazards

23. Locker/Luggage lights



24.Kneel

25.Ferry lift reset

26.Ferry lift

27.Exhaust break

28.Not sure?

29.Toilet

30.Reverse

31.Fridge (must turn off or battery will drain)

32. WIFI (Not enabled)

33. Air horn

34. Mirror demister

35. Engine check

36.ABS

37. Kill switch (kills all power)


38. Power

39.Mirror adjustments



40. Gears (select **R** button **(30)** for reverse as well as this)

41. Handbrake

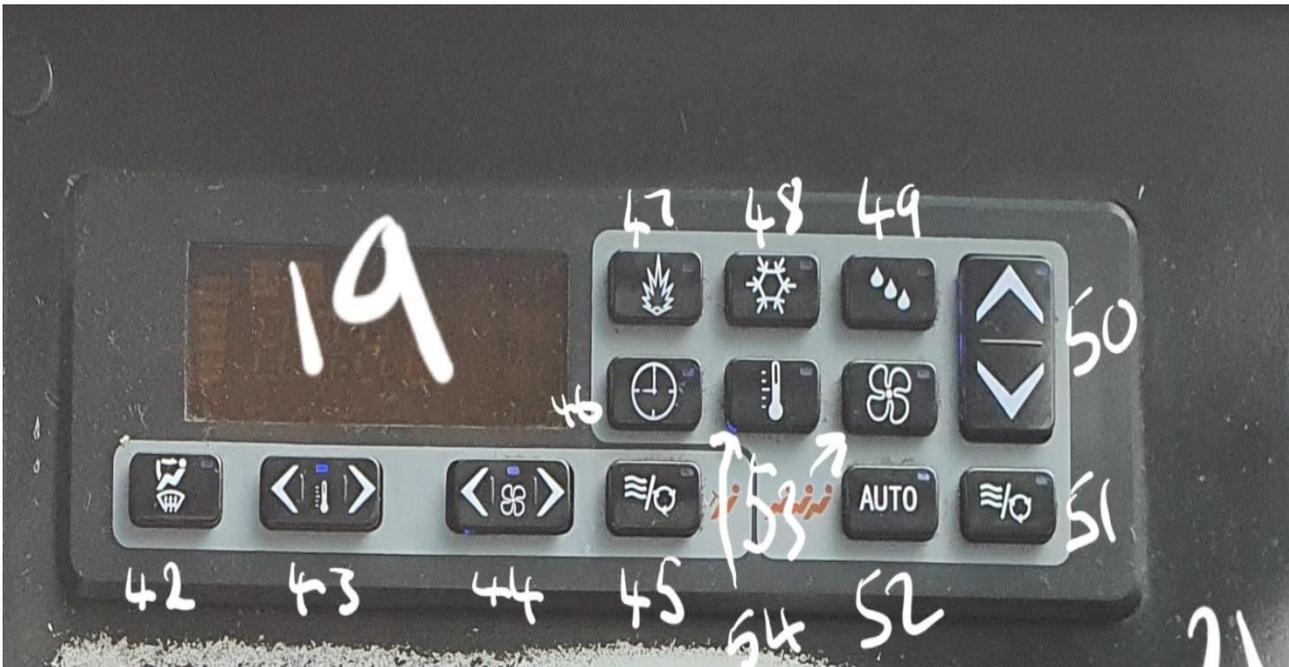

42.Driver fan direction

43.Driver temp

44.Driver fan speed

45.Driver air recycle

46.Timer

47.Webasto

48.Aircon

49. Moisture removal

50. Fan/Temp adjustment

51. Pax air recycle

52. Auto mode (best mode)

53. Pax fan speed

54. Temp control

