

SCANIA HIGER USER MANUAL (LJ18LLJ)

Keys- the fob has been removed as people kept shutting door and assuming it was locked but all the fob did was shut the door not lock it. So, the thinner key is used to open all doors and most lockers.

Getting in- using the key to unlock the door then pushing the small black button (lower one) to release the door, pushing the other button will then close the door but will still need locking with the key.

Power- Power switch is located to the left of the steering wheel lightning symbol (see chart **11**)

Doors- if doors will not open check the locker immediately behind the door if not shut properly it assumes its open therefore will not open, the corner most likely needs to be pushed in (not by foot!!!)

Heat/Air con - Three dials are driver (cab) control, along with number 17/18 (see chart) the rest of the controls are for the passengers.

Driver Adjustments- To adjust fan direction use dial 14 for fan speed use dial 15 for temperature adjustments use dial 16. For aircon use button 17 and to recycle the air use 18. See chart for simple passenger controls.

Microphones- Two fitted one is in the dash the other is attached to the wall to the right of driver seat/window, both are simply slide switch and they are on.

Boiler- Boiler is located in the cupboard by the stairs push in the black button and the door slides down. Coffee pot to the left (does not heat up well so never used) to the right is the main machine mechanism. Make sure it's turned on at the dash (see chart two buttons for it), once door rolled down you will see many buttons and four dials and a tap.

Firstly make sure its switched on here too,(see chart for on off button) then needs filling ensuring the button with the **P** (Pump see chart) is on then you will see a dial with a grey dot on, turning this will fill the boiler, long glass tube is there so you can see how full it is. Then there is a dial with red dot and black lines on (far left see chart) turning this will turn on the heat for the boiler, swing the tap out and then turn the dial with red dot (see chart) to get hot water to flow (may take 20mins to heat) or turning the dial with the blue dot

will give you cold water. **Reset button** can be located on the underneath of the boiler behind the tap.

Coffee Pot- Button with the half full and colored in red is to heat the boiler to the left and the button adjacent to it is to fill the same boiler, although it does not work very well so hardly ever use it. The on off button for the boiler far left is located on the boiler, it also pulls out for ease of use.

Boiler Winter Prep- to prevent damage in the winter all boilers need emptying. So go to the front offside locker unclip the hose above the water tank, then unscrew 3 bolts to the right of water tank (behind black metal) to gain access to the water pump and the remaining pipes unclip the two pipes then head back inside to pour all the remaining water out of all pipes and tank by simply turning the blue dot dial until no water runs through. Don't forget to clip them all back and draw water for the return journey.

Toilet- keys needed to access the toilet drop keys are silver and chunky and kept in the driver cab area normally in the small pocket to the right of the driver seat/under window, the drop button is located under the ink in the toilet. A total of four buttons under the sink the only one you need is the top right (red)

Push it in once valve will open wait until empty push again to close (if not closed flush will not work).

Topping up the waters for flush and sink are found in the 2nd locker from the front offside once opened you will see two white hosepipes one is flush one is water for sink, simply attach a hose connector turn valve (blue) to align with flow of hose and top up.

Batteries- Are in the front offside small locker. (Square key needed)

Fuses- Are in the front offside locker in a cupboard. (Square key needed)

Spare Bulbs- Drop down locker above front door

Spare Belts- Are in the rear nearside locker cable tied to a pole.

Oil/water/coolant- located in the AdBlue locker.

Triangle- Rear Adblue locker.S



1. DVD player
2. Tacho
3. CD Player
4. Radio
5. Middle Door
6. Front Door
7. Camera monitors



8. Tracker
9. Traction Control
10. Hill Assist
11. Power switch
12. Ferry lift
13. Kneel
14. Driver temp direction
15. Driver fan speed
16. Driver temp control
17. Driver air con
18. Driver Recycle Air
19. Pax eco mode
20. Pax Auto mode
21. Pax Reheat
22. Pax air recycle
23. Webasto
24. Pax fan speed
25. Pax Temp Control



26. Lights
27. Dash Lights
28. Cruise control
29. Lane Assist
30. Brake Assist
31. Manual regeneration of particulate filter
32. Front Fogs
33. Rear Fogs
34. Check Lights Button



- 35. Reading lights
- 36. Driver light
- 37. Air Horn
- 38. Left sun blind
- 39. Right sun blind
- 40. Main interior lights
- 41. boiler (hot dog)
- 42. Boiler
- 43. Driver window
- 44. Stop Request
- 45. Toilet
- 46. Heated window
- 47. secondary heating

48/49. Locker unlock /Lock

50. Top Mirror's Adjustment

51. Driver mirror Adjustment



- 52. Steering wheel Adjustment
(to the side of wheel)
- 53. Cruise Control
- 54. Distance set
- 55. Hill break
- 56. Onboard computer Adjustment