

MERCEDES USER MANUAL (LJ19 LLJ)

Getting in- Large fob with and unlock lock button on the fob ones unlocked push the button on the door (9black round)

Power- There is no power switch on this coach.

Heat/Aircon- the heater /aircon control panel is located to the left of the steering wheel, dial **17** controls temp for drivers and for passengers you need to push **18** in order to access passenger control. Using **25** will adjust fan direction by pushing it in and twisting to control airflow a picture will appear on screen showing desired selection. **19** will turn on the webasto. On this coach there is an ability to set the webasto on a timer I believe the timer has already been set to warm the coach up early morning it's in the menu settings however please only do this if you are sure of how this works.

Microphones- two fitted one is near the front door ensure both radios are on and you will find a mic button on the radio once pushed mic is switched on should work, second mic is on driver seat. The other is located on driver seat and switch is on dash.

Boiler- to top up boiler open locker door here you will find a wheeled water storage container please remove hose connection before taking off the coach to top up and be sure to reconnect once fitted back in the coach. Back onboard the coach ensure switch is on (see chart) go to the middle and push the silver button located near the tap hot water will slowly start to feed through may take some time to heat up. **Issues** sometimes the pipes can get air locks go back to the locker disconnect hose and blow into them to try and eliminate any air locks

Boiler Winter Prep – to prevent damage in winter due to cold weather please drain the boiler. Unclip the hose connector in the locker then go back inside to drain the water until empty.

Toilet- open locker near the middle door here you will find a lever turn this lever to drop the toilet and use the hose connectors to top up flush water and sink water levels.

Spare Belts- in the engine bay lower right corner cable tied to pole.

Batteries- front nearside ski locker with main kill switch

Oil/ water/coolant – oil water and coolant are in the main locker as well as winter kit.

Fuses- Rear offside ski locker

Spare bulbs-

Triangle-



- | | |
|--|--|
| 1. Front door | 14. Boiler/urn |
| 2. Middle door | 15. Toilet |
| 3. Emergency door reset | 16. Inside air recycle |
| 4. Hazord light | 17. Temp control (push in for auto) |
| 5. Halt break | 18. Passenger selection |
| 6. Ferry lift up reset down kneel | 19. Webasto |
| 7. Ferry lift | 20. Aircon |
| 8. Lock/unlock lockers | 21. Passenger aircon/webasto |
| 9. Lock/unlock lockers | 22. Menu |
| 10. Driver light | 23. Turn system off/restart |
| 11. Reading light | 24. Windscreen demister |
| 12. interior light | 25. Fan speed adjuster |
| 13. Night lights | |



26. Up for Lane departure assistance off


27. Down for distance assistance off

28. Traction control

29. Steering wheel adjustment

30. Assistance/stop

31. Tachograph

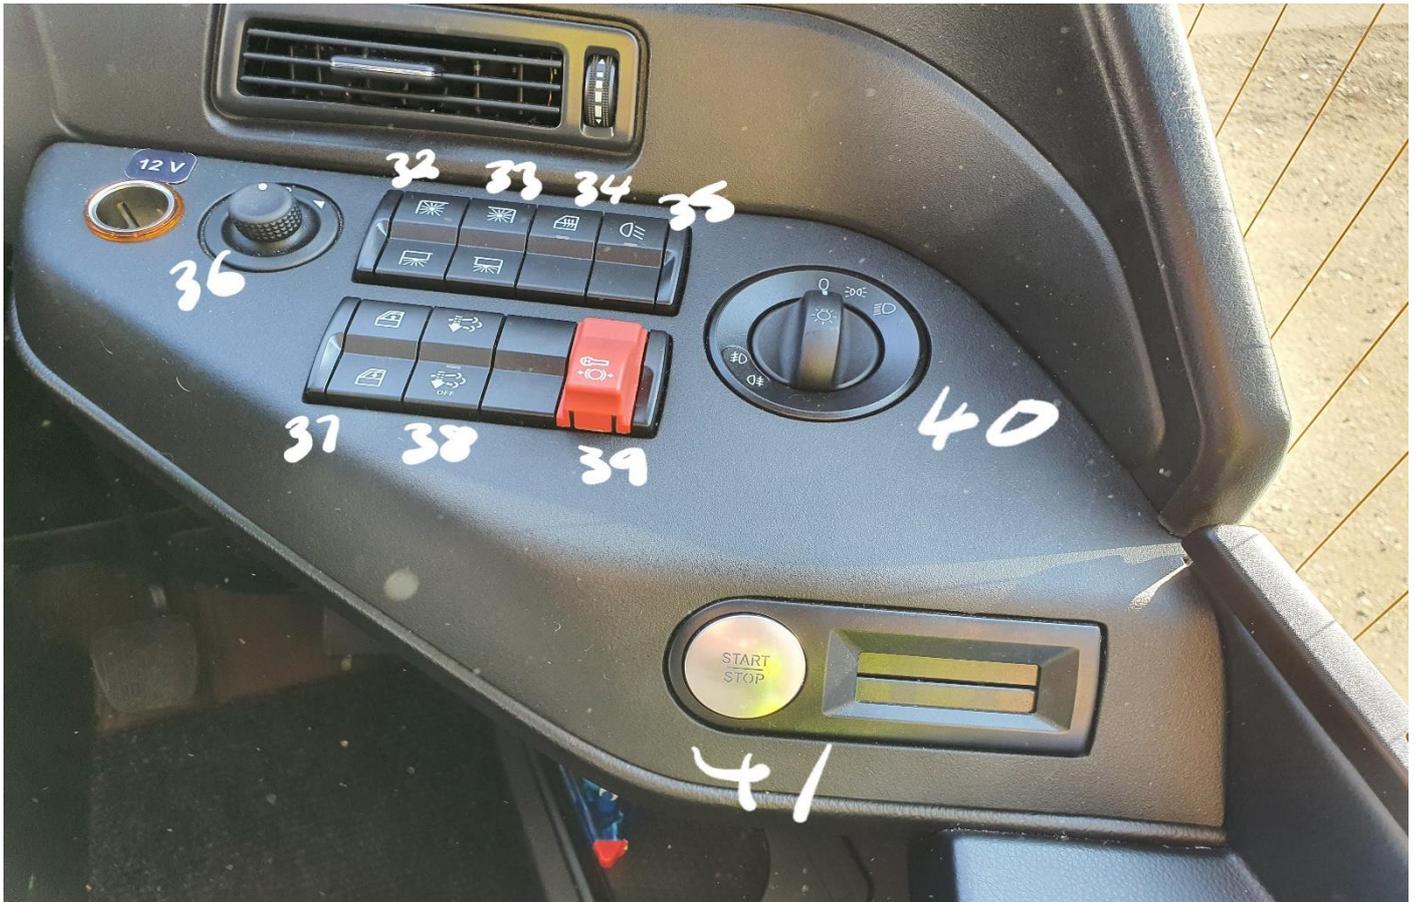

32. Nearside sun blind

33. Offside sun blind

34. Driver window demister

35. High beam

36. Mirror adjustment

37. Driver window

38. Regeneration (**DO NOT TOUCH**)

39. Halt break

40. Main lights

41. Stop start button



42. Cruise control/ speed limiter settings

43. Dash menu/ selection buttons

